




OWNER MANUAL MS-FA-10-12

MONSOON FLOATING FOUNTAIN

800-553-5605 • www.anjonmfg.com

Thank You and Congratulations

Enjoy years of beauty and performance from Anjon's Monsoon Floating Fountain Your Anjon Floating Fountain is ready to assemble in three easy steps! This Floating Fountain adds aesthetic beauty, added necessary oxygen to enhance aquatic life health and de-stratifies thermal layers to help get rid of algae.

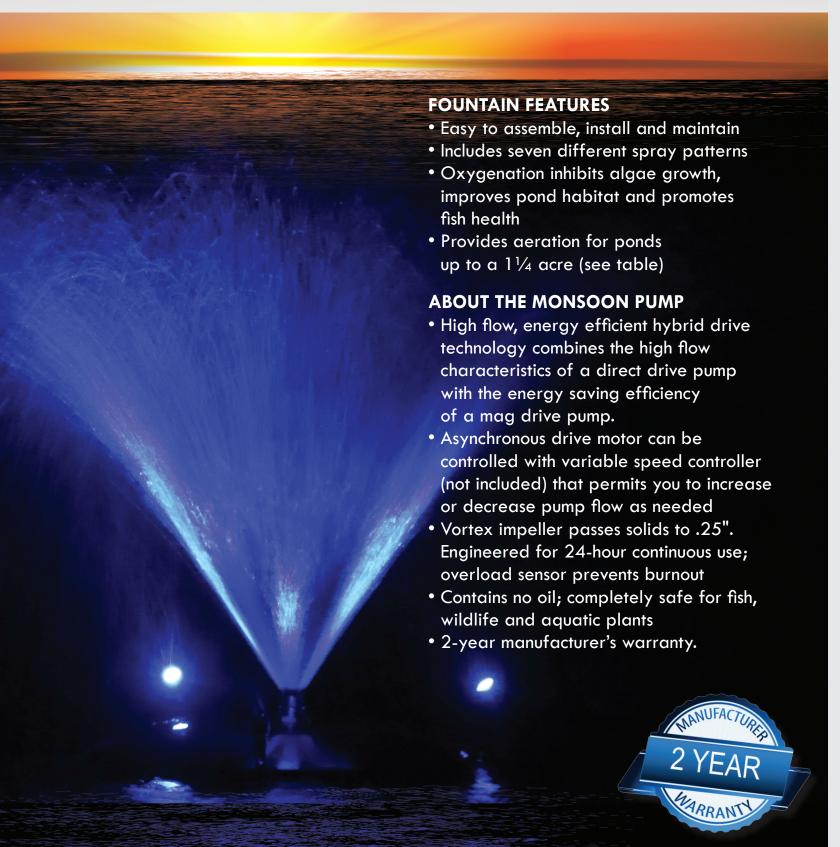

Please read all instructions thoroughly and understand them prior to installation or use. If you have any questions or are missing pieces, do not contact or return to place of purchase; please call **1-800-553-5605**.

CONTENTS	PAGE
Components	4
Nozzle Assembly	4
Optional Light Assembly	5
Optional Accessories	5
Mooring Rope Assembly	6
Warranty Info	7



SAFETY INSTRUCTIONS

- Read and observe all the instructions supplied with the pump and on the pump.
- Make sure that your outlet voltage corresponds to those stated on the rating label of the pump(s).
- Make sure the pump is securely installed before operating it.
- The electrical connection should be in a water-proof area and should be at least 6 feet away from the edge of the pond. (see fig. 3)
- Keep the electrical connections dry! Hang the electrical cord below the electrical outlet to form a "Drip Loop". This will prevent water from running down the cord into the electrical outlet
- · Always unplug the pump when not in use, before putting on or taking off parts, before cleaning the pump and before doing any work for the fountain or pond.
- The pump must not be used when people are working in water. Please disconnect the pump first.
- Do not operate any appliance with a damaged cord or plug, or in abnormal state. The supply cord of the pump cannot be replaced.
- If the cord is damaged the pump should be discarded. Replacement pumps are readily available.
- Do not cut the plug end off the cord for any reason. Cutting the cord voids the warranty and may create an electrical hazard.
- · For safety reasons, routine cleaning, maintenance or repair work should only be done with the power cord disconnected from the power source.
- Never hang or transport the pump by means of pulling the power cord!
- Close supervision is necessary when the pump is used by or near children.
- To disconnect the pump from the power source, pull the plug by the molded end; never pull the plug by the wire.
- · Never use any accessories which are not recommended by the pump manufacturer. This may result in fire, electric shock, personal injury and/or voided warranty.
- The pump is to be supplied through a Ground Fault Circuit Interrupter (GFCI) with a rated residual operating current not exceeding 30mA.
- To protect against the risk of electrical shock, do not immerse the plug in water or other liquid.
- · Do not plug the pump in out of water, doing so damages the pump and voids the warranty
- The pump power cable needs to be ran through conduit from your water feature to the GFCI.
- Do not fish around the fountain, this can damage the power cord.
- If running in winter be careful of thin ice; the fountain will keep the ice thin and dangerous to walk on.
- · Use extreme caution when operating fountain in cold weather and cold water. Do not walk on ice. Thin ice will break, creating the risk of hypothermia or drowning.

PUMP AND FOUNTAIN SPECIFICATIONS	MS-10000	MS-12500
Pond Size (surface acres)	Up to 1	Up to 11/4
Range of Fountain Pattern Heights (feet)	7-25	7-28
Range of Fountain Pattern Widths (feet)	4-28	5-35
Minimum Operating Depth	20"	20"
Max Flow (gph)	10,000	12,500
Watts (120v)	1000	960
Amps	8.3	8.0
Volts	120	120
Cord Length (ft.)	100, 200	100, 200
Dimensions I x w x h	12" x 9" x 9"	15" x 8" x 9"
Pump Weight (lbs.)	29	30

A. REVIEW COMPONENTS

- 1. Remove all components from packaging.
- Inspect all components of the fountain kit to ensure there was no damage to components during shipping. Notify Anjon about any damage.
- Once it is determined all components are undamaged you are ready to assembly your Floating Fountain. LIGHT KIT SOLD SEPARATELY.





Fountain Float & Nozzles





AQF-10-12.5-PD Pump Discharge



Pump





Slide the 2 Flange halves around the hub Lift Float and attach it to the hub using the 4 M8 1" Screws provided



FIG 1

Scan QR code for assembly instructions and video.



B. NOZZLE ASSEMBLY (FIG 1)

1. Place pre-assembled parts under the float through the center.



Slip the Nozzle Quick-Release down over the nozzle and twist it to lock into place



Select and install nozzle.Do not over tighten.

CAUTION: THE NOZZLE ATTACHES THE PUMP ASSEMBLY CONNECTOR TO THE FLOAT. REMOVING THE NOZZLE RELEASES THE PUMP.











C. INSTALLING OPTIONAL IGNITE FOUNTAIN LIGHTING KIT (FIG 2) Light kits are sold separately.

- 1. Attach the light clips to the float with provided M8 x 12mm screws. Do not overtighten as this can crack the float.
- 2. Attach the LED lights to the light clips. Aim the lights toward the fountain display.
- 3. Apply a light coat of waterproof grease and assemble the lighting harness.
- 4. Read and follow the instructions included with the fountain light kit.







COLOR CHANGING LIGHTS WITH STANDARD CONTROLLER

Our RGB LED Brass Light kits come in 3 or 9 watts. They are available in standard white or remote color-changing. They are also offered with a 100' or 200' power cord option. Lighting kits include a remote which allows you to select solid colors or color patterns, a photo cell which turns the unit on automatically at night and off during daylight hours, and the transformer to power the unit. These LEDs are energy efficient and extremely bright. Lighting kit allows you to extend the time you get to enjoy your water fountain. Choose any setting you want to keep your feature fresh and exciting.

ADD A WIFI CONTROLLER

This unit controls your lighting through an app on your smart phone! The WiFi controller will take any lighting display to the next level. Choose from many different modes that automatically color change, fade, strobe, etc. You can take a picture of a color and the lights will match that color. You can also play music on your phone and the lights will change colors and modes along with the music. Also use the timer function to automatically turn the lights off when you will not be home to enjoy your feature. Your floating fountain will look great during the day, this controller gives you an even more dramatic display at night.

FLOATING FOUNTAIN **DEEP INTAKE**


This optional extra intake easily attaches to your pump. It keeps your pump from being clogged with the larger intake. It also keeps your pond turning over more. In a deep water feature the water can be trapped in thermal stratification levels. This helps stave that off by mixing the water deep down. It will take the oxygen depleted water at the bottom and cycle it up to the surface. The intake is fish safe and it will not restrict your pump. We can use any length of flex tubing, fittings, intake screens so the intake add on will be perfect for your feature.


F. MOORING ROPE INSTALLATION (FIG 3)

Attach mooring ropes (not included) and secure to anchors or weights. Place the anchors gently into the pond at opposite edges of the float. Set one anchor near the edge of the pond to make it easier to retrieve the fountain for servicing. Be sure to not use sharp rocks, as they can damage your liner. Make sure the ropes are secure to the float. Important: Always retrieve the fountain using mooring ropes. Never retrieve with the power cord.

FIG 3



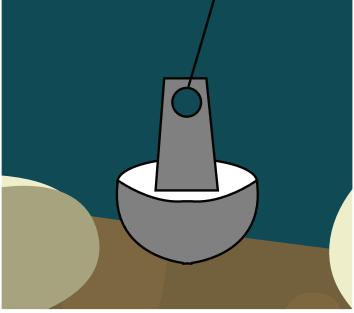

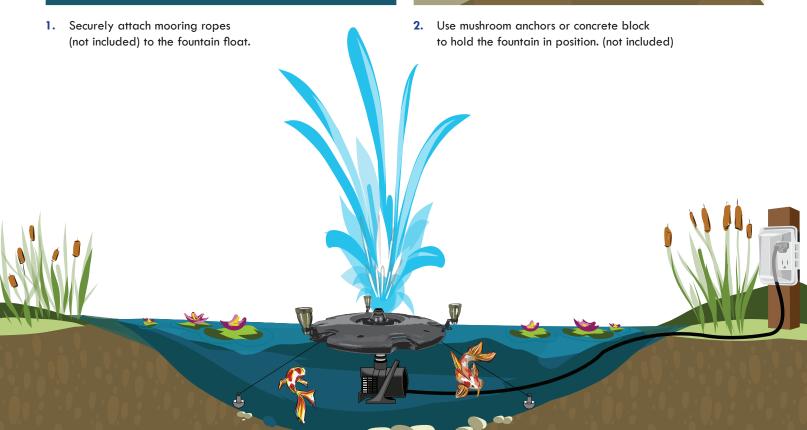

3. Position the floating fountain in the desired location and set the anchors. To keep fountain stationary, place the anchors 2' - 4' apart for every foot of pond depth.





WARRANTY

These products, distributed by Anjon Manufacturing (Anjon) are warranted to the original user only to be free of defects in material and workmanship for a period of 24 months from the date of purchase, but not more than 30 months from the date of manufacture. Anjon's liability under this warranty shall be limited to repairing or replacing, at Anjon's discretion, without charge, F.O.B. Anjon will not be liable for any cost of removal, installation, transportation, or other charges which may arise related to a warranty claim.

FOUNTAIN MODELS:

AFF10100 AFF10200 AFF12100 AFF12200

Reference the pump manual and light manual for warranty details for these products.

To obtain service under this warranty, the defective product must be returned to Anjon together with proof of purchase and installation date, failure date, and supporting installation data. Any defective product to be returned to ANJON or a service center must be sent freight prepaid: documentation supporting the warranty claim and/or an Authorized Warranty Return (AWR) must be included if instructed. In the absence of suitable proof of purchase date, the effective date of this warranty will be based upon the date of manufacture.

Any replacement product may be either new or like-new, provided it has functionality at least equal to that of the product being replaced. No requests for service under this warranty will be accepted if received more than 30 days after the term of the warranty. Correction of defects, in the manner and for the duration of the warranty described in this warranty, shall constitute complete fulfillment of all liabilities and responsibilities of ANJON to the user with respect to the product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. Except for the obligations specifically set forth in this warranty, in no event shall ANJON be liable for direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory and whether advised of the possibility of such damages.

ANJON reserves the right to change or improve its products or any portions thereof without being obligated to provide such a change or improvement for units sold and/or shipped prior to such a change or improvement.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THOSE WARRANTIES DESCRIBED OR REFERRED TO ABOVE EXCEPT AS EXPRESSLY HERIN PROVIDED THE GOODS ARE SOLD "AS IS", THE ENTIRE RISK AS TO QUALITY AND FITNESS FOR A PARTICULAR PURPOSE, AND PERFORMANCE OF THE GOODS IS WITH THE BUYER, AND SHOULD THE GOODS PROVE DEFECTIVE FOLLOWING THEIR PURCHASE, THE BUYER AND NOT THE MANUFACTURER, DISTRIBUTOR, OR RETAILER ASSUMES THE ENTIRE RISK OF ALL NECESSARY SERVICING AND REPAIR.







